

⊥ (2, 1)

⊥



22 3/8"


1/4"


+

+

(3, 1)

DPF1324 Cutout Template

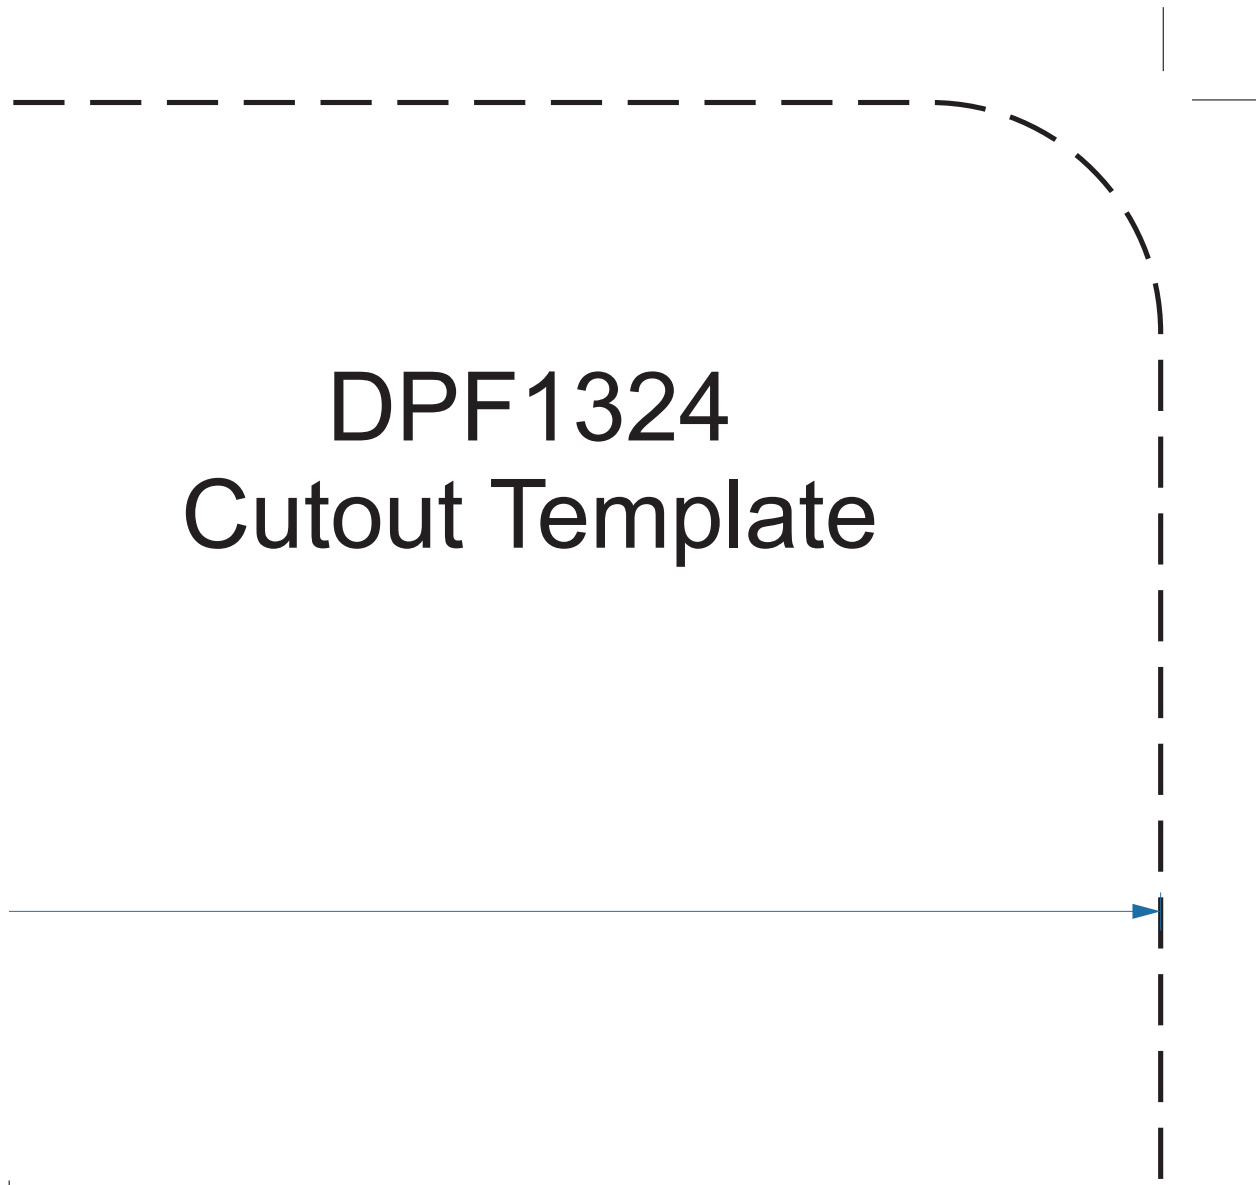

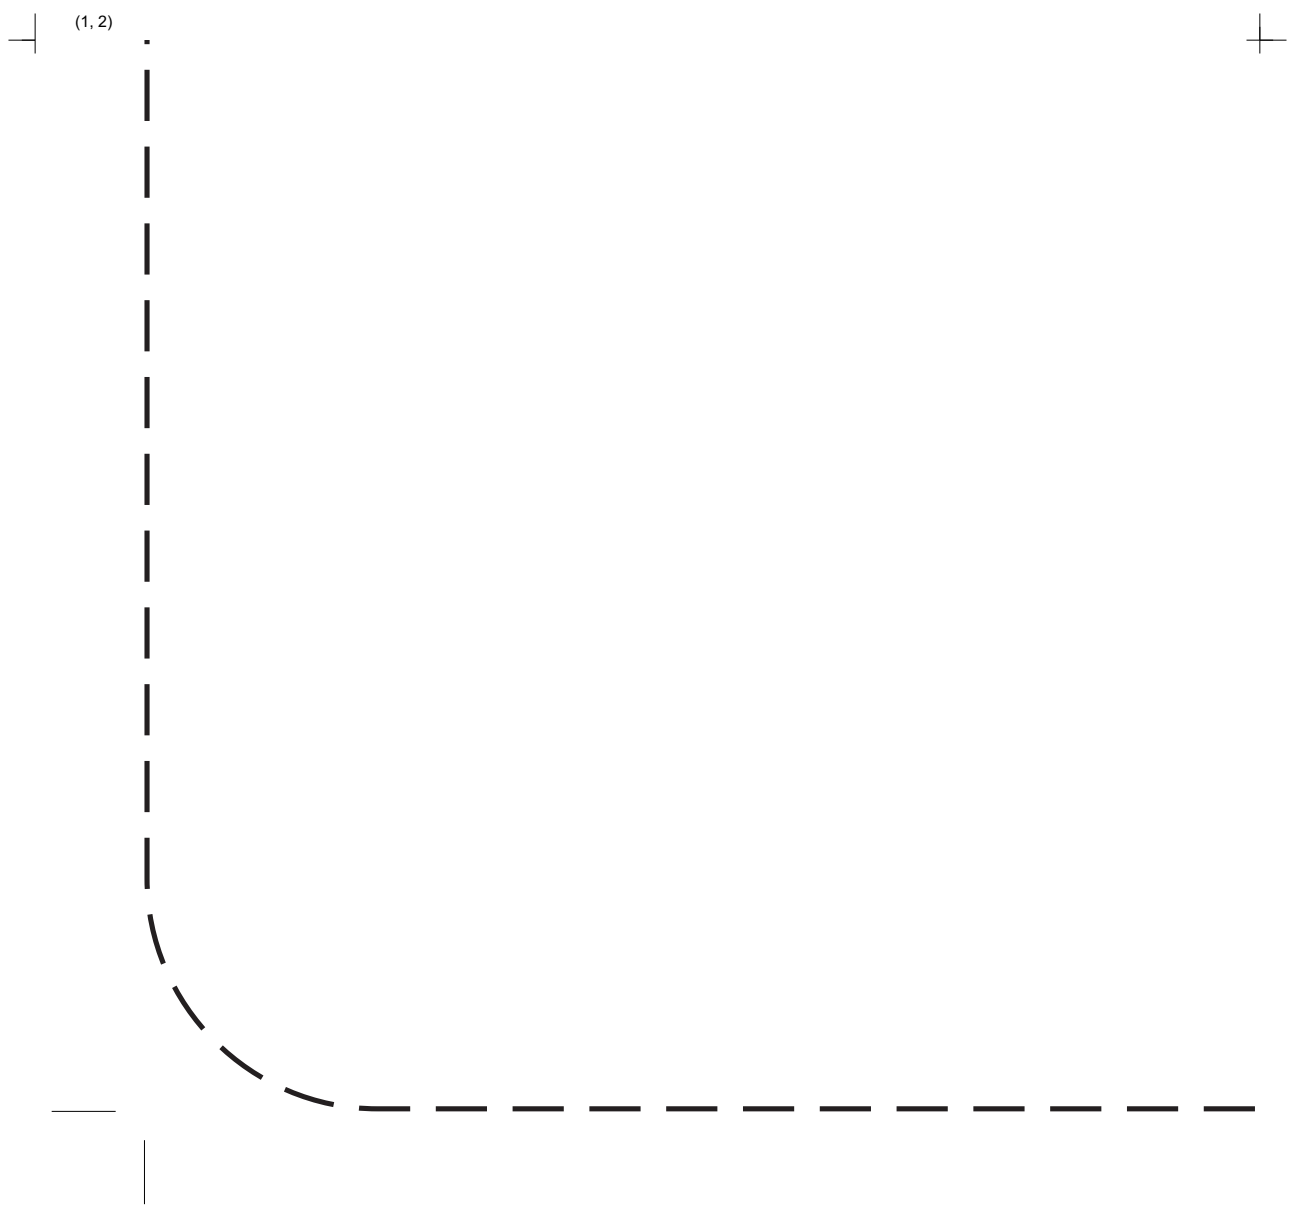

11



Ins

- 1) Carefully
- 2) Tape dov
- 3) Carefully
- 4) Place ha
- 5) Apply gel
to mounting
- 6) Install fas
tighten

Installation Instructions:

- cut along dotted line
- pin template on location to be mounted
- cut hole where hatch is to be mounted
- notch in hole mark/drill fastener holes
- generous bead of marine grade silicone
- on g surface and place frame into place
- tighten fasteners and be careful not to over

