

$(2, 1)$

$34'$


$1/4''$


(3, 1)

1/4"

(4, 1)

# DPF1336 Cutout Template

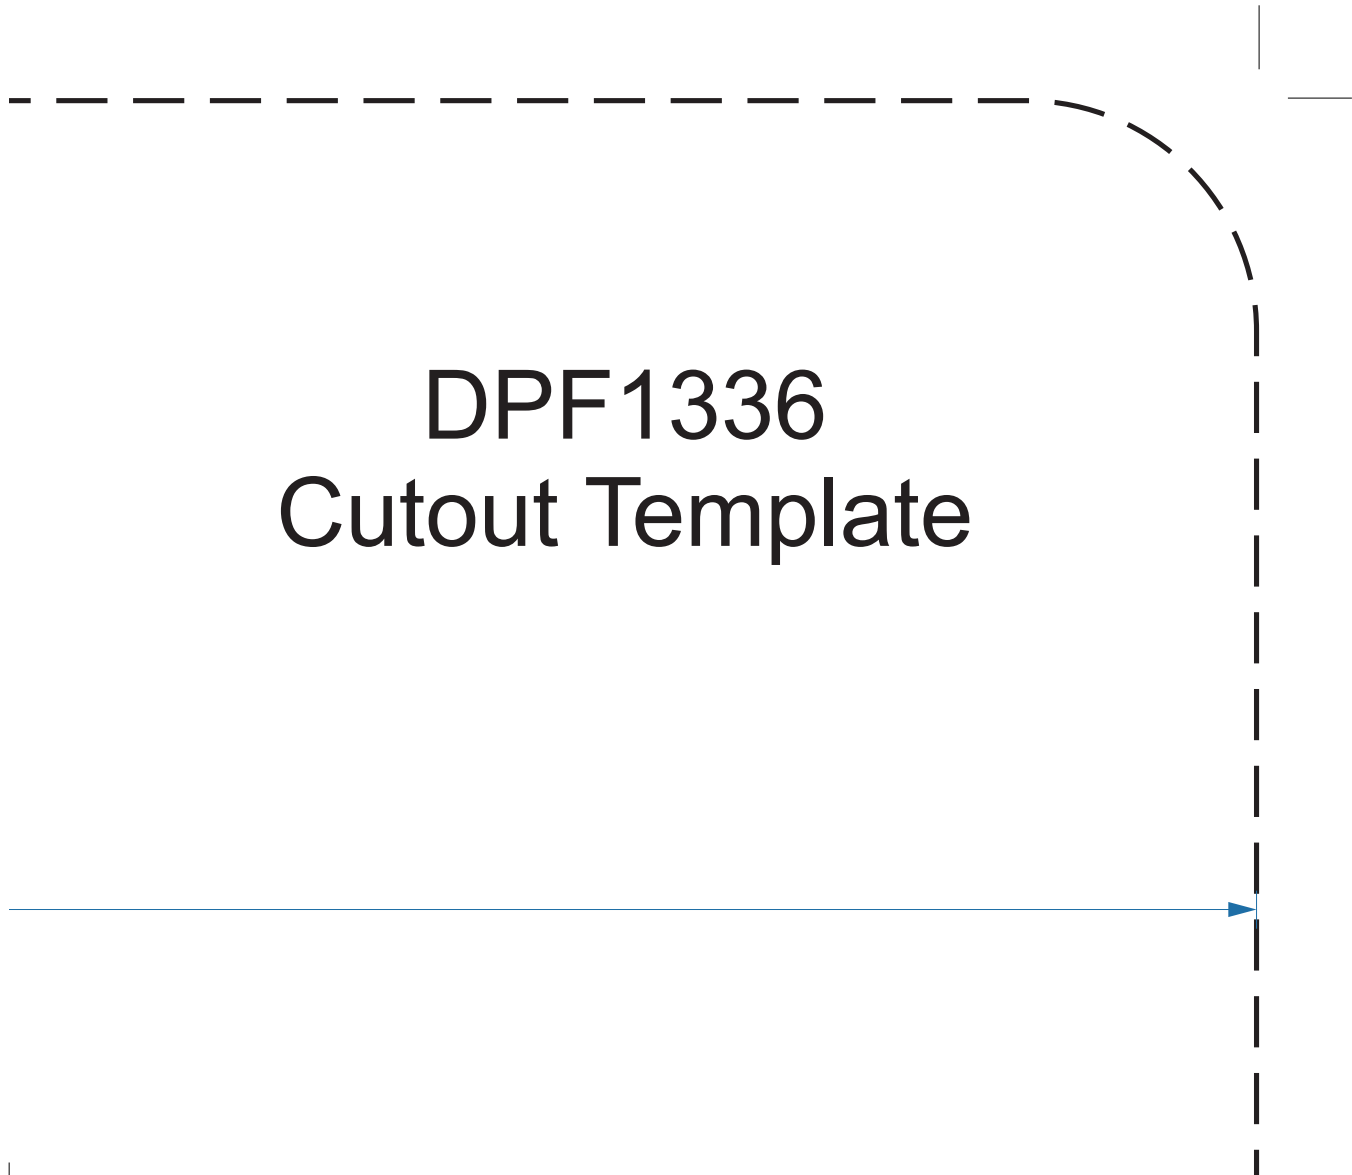



(2, 2)

11



- 1) Caref
- 2) Tape
- 3) Caref
- 4) Place
- 5) Apply  
to mour
- 6) Instal  
tighten

# Installation Instructions:

- 1. Fully cut along dotted line
- 2. Lay down template on location to be mounted
- 3. Fully cut hole where hatch is to be mounted
- 4. Place hatch in hole mark/drill fastener holes
- 5. Apply generous bead of marine grade silicone to mounting surface and place frame into place
- 6. Tighten fasteners and be careful not to over

