


(1, 1)

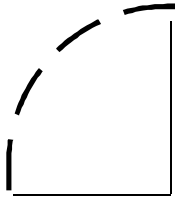

1"
Radius

DPG912 Cutout Template 2-3/4" Depth Clearance

10 7/8"

7 3/4"

Installation Instructions

- 1) Carefully cut along dotted line
- 2) Tape down template on location
- 3) Carefully cut hole where hatch
- 4) Place hatch in hole mark/draw
- 5) Apply generous bead of mastic to mounting surface and place
- 6) Install fasteners and be careful to tighten

(2, 1)

ate
nce Reqd

structions:

ne
tion to be mounted
ch is to be mounted
ll fastener holes
fine grade silicone
e frame into place
eful not to over