


(1, 1)

1/2" Radius

2" Radius

DPH10  
Cutout Te  
Installation In

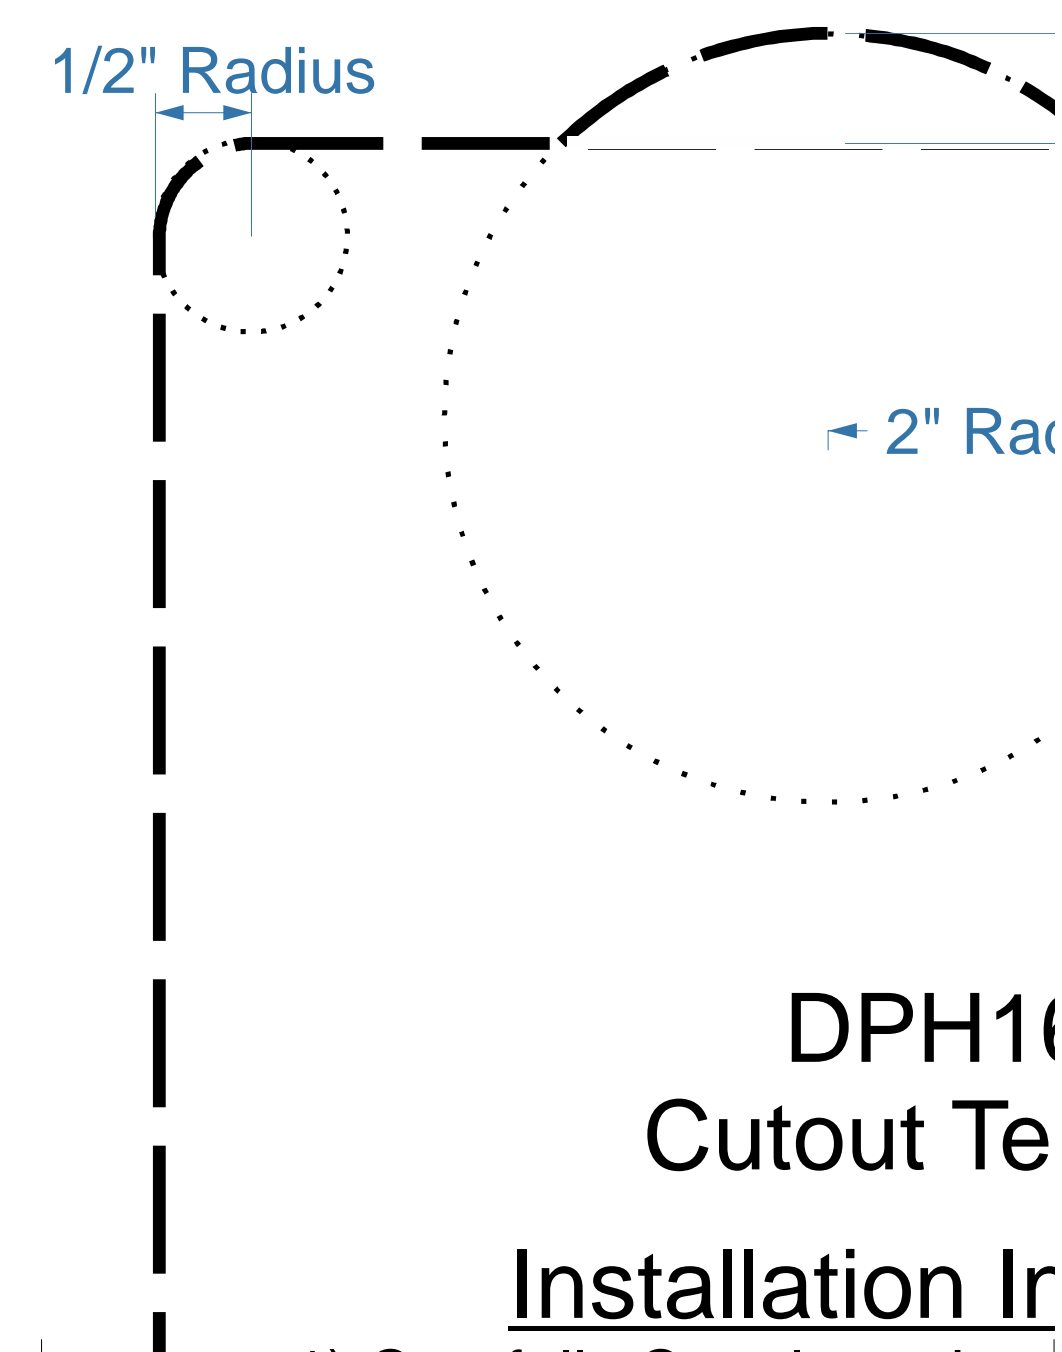

(2, 1)


5/8"

dius


620  
mplate


Instructions:

10"

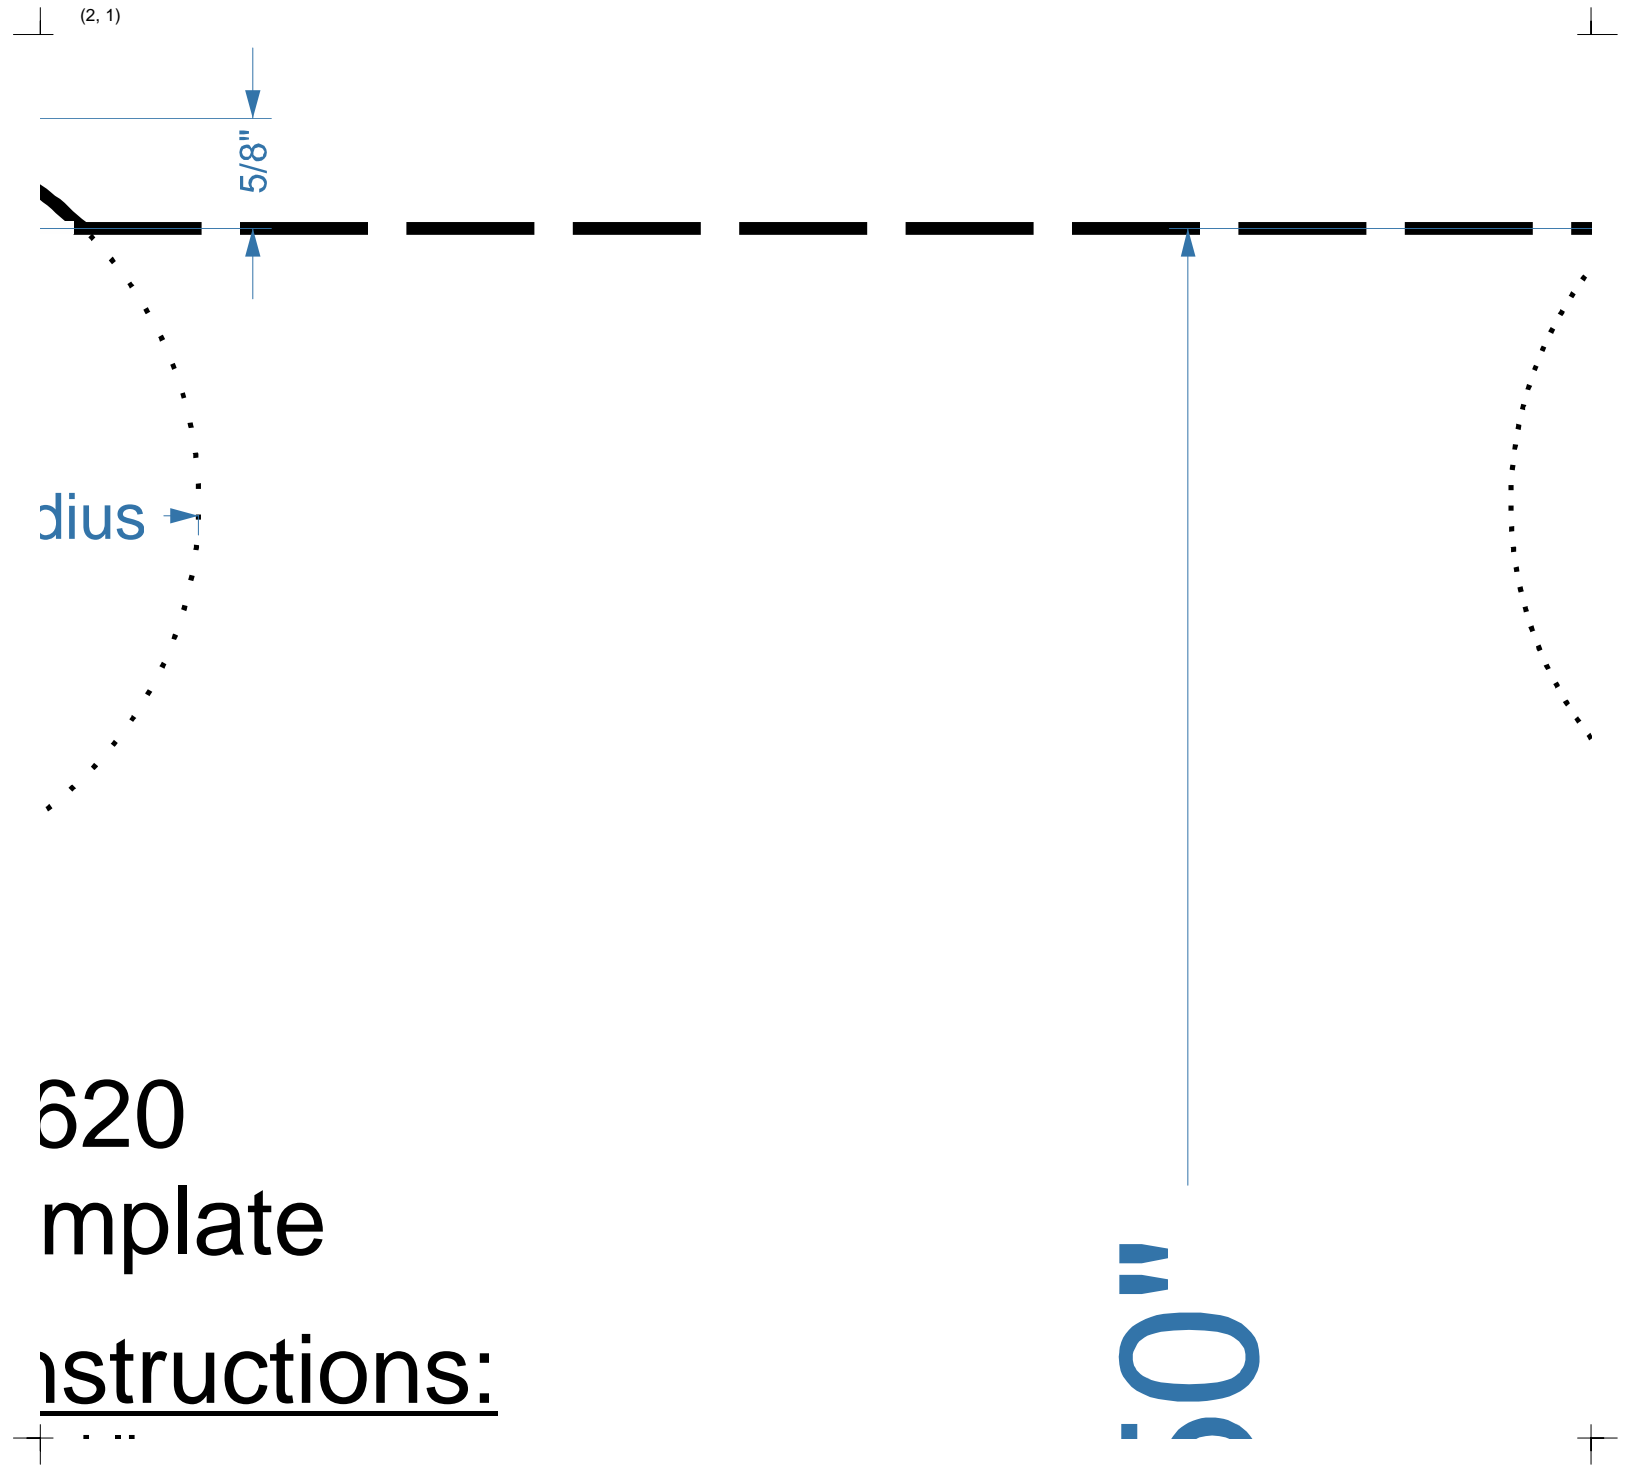

(3, 1)

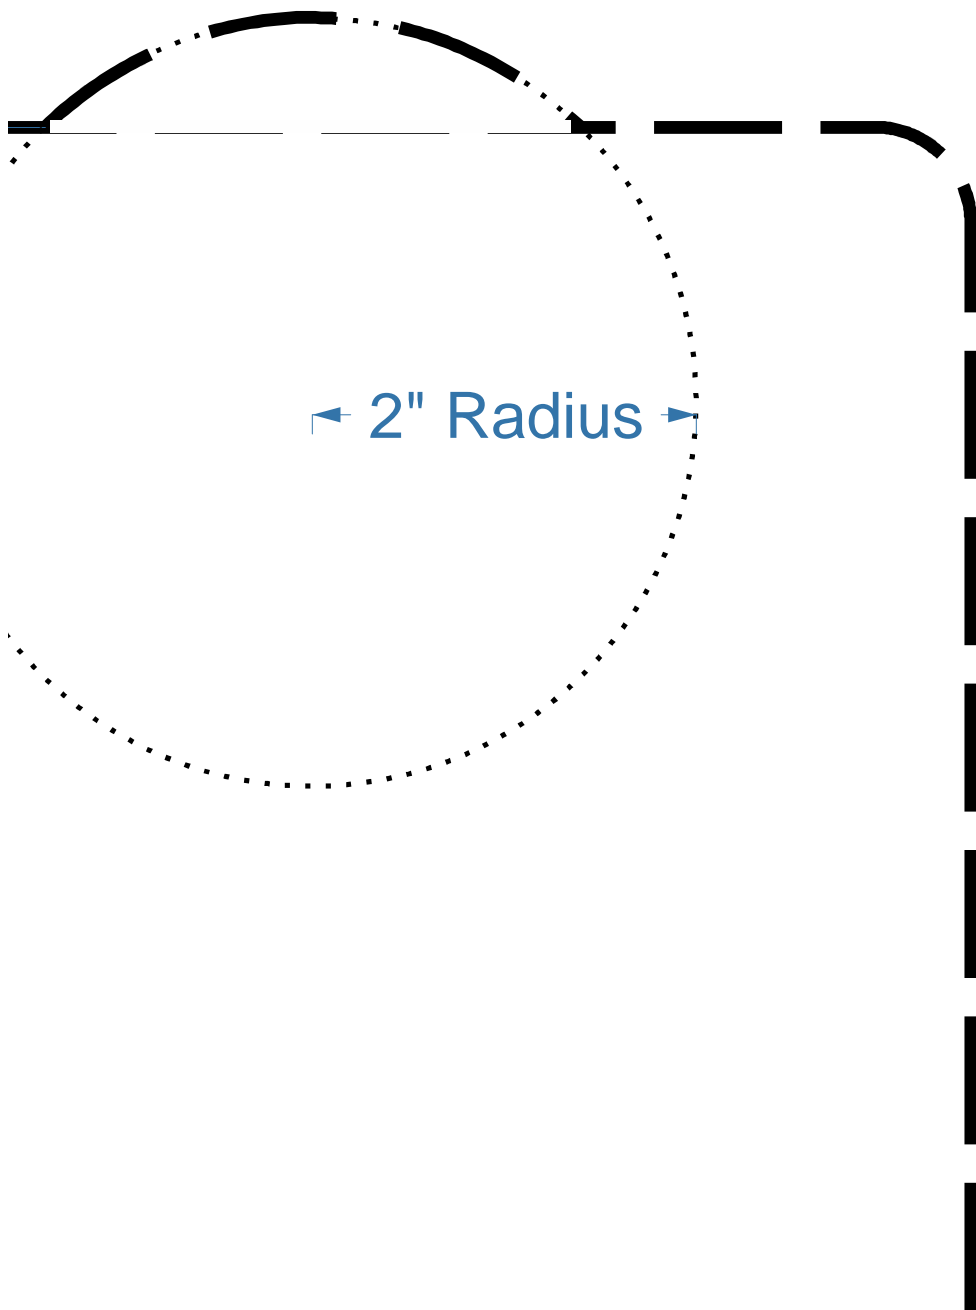

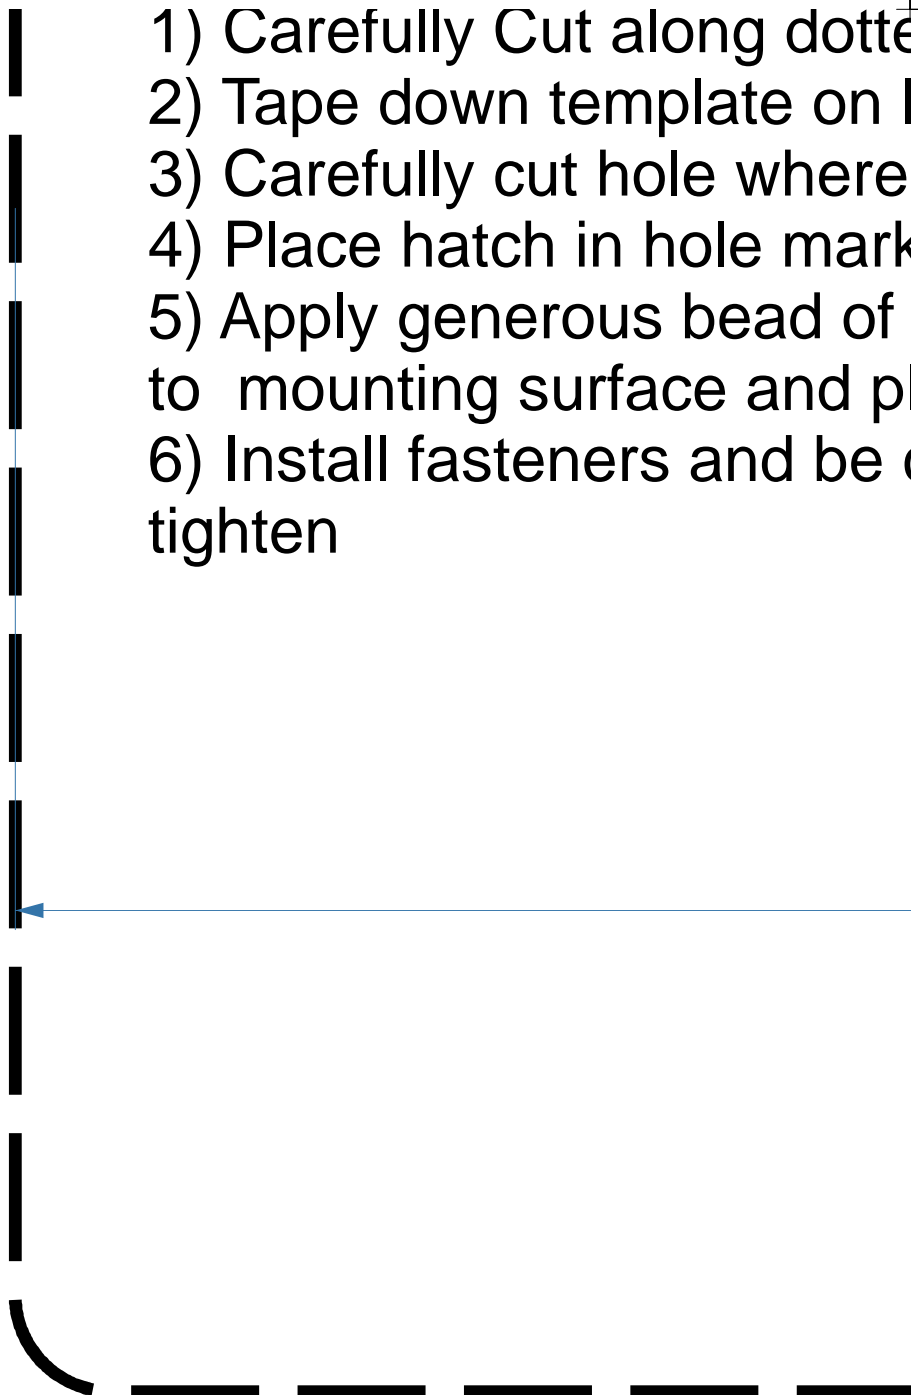

- 1) Carefully Cut along dotted
- 2) Tape down template on l
- 3) Carefully cut hole where
- 4) Place hatch in hole mark
- 5) Apply generous bead of  
to mounting surface and pl
- 6) Install fasteners and be c  
tighten

ed line

location to be mounted

hatch is to be mounted

✓drill fastener holes

marine grade silicone

lace frame into place

careful not to over

13.5

17.75"



(3, 2)

